

Register your product and get support at

www.philips.com/welcome



26PFL3404/12

32PFL3404/12

42PFL3604/12

26PFL3404/60

32PFL3404/60

42PFL3604/60






Quick

Start









Q41G7830813 4A


PHILIPS

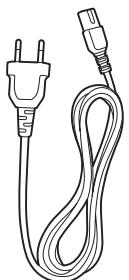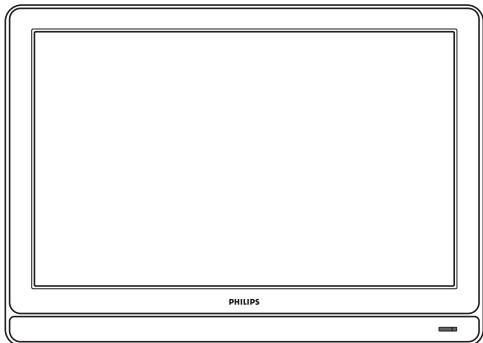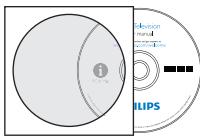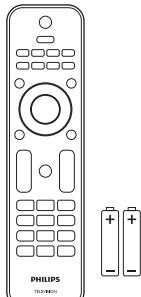

1

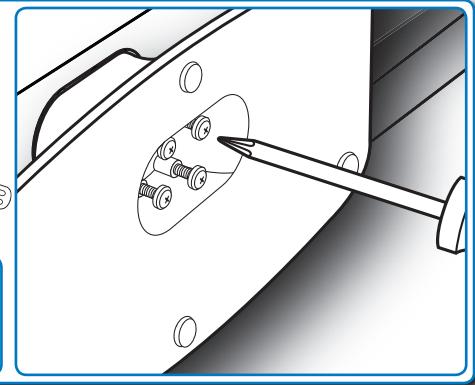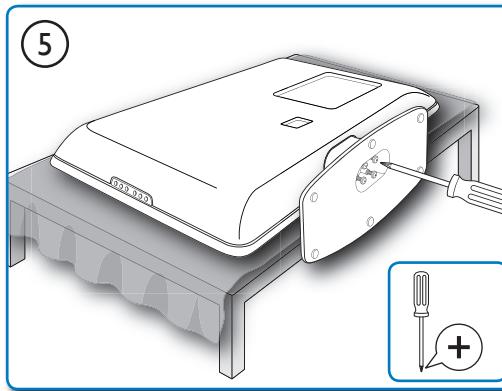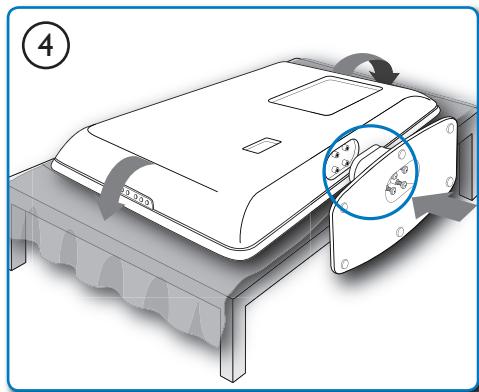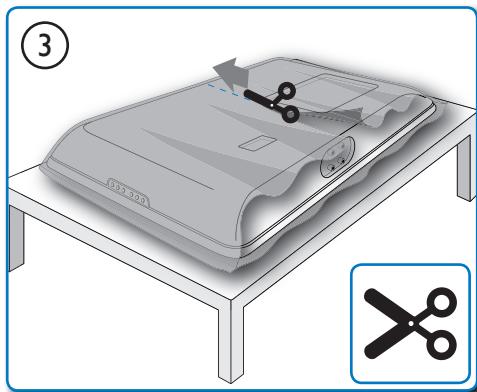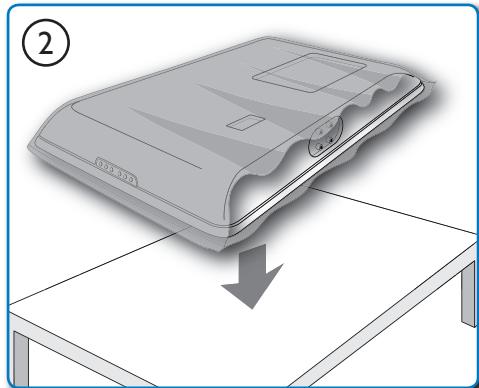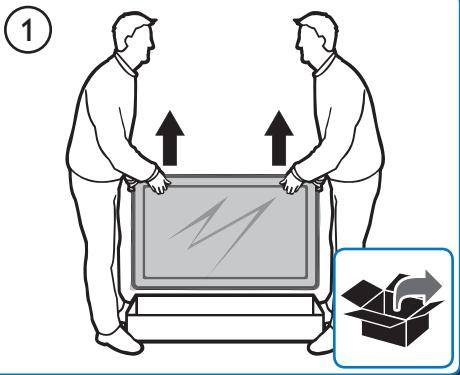


2

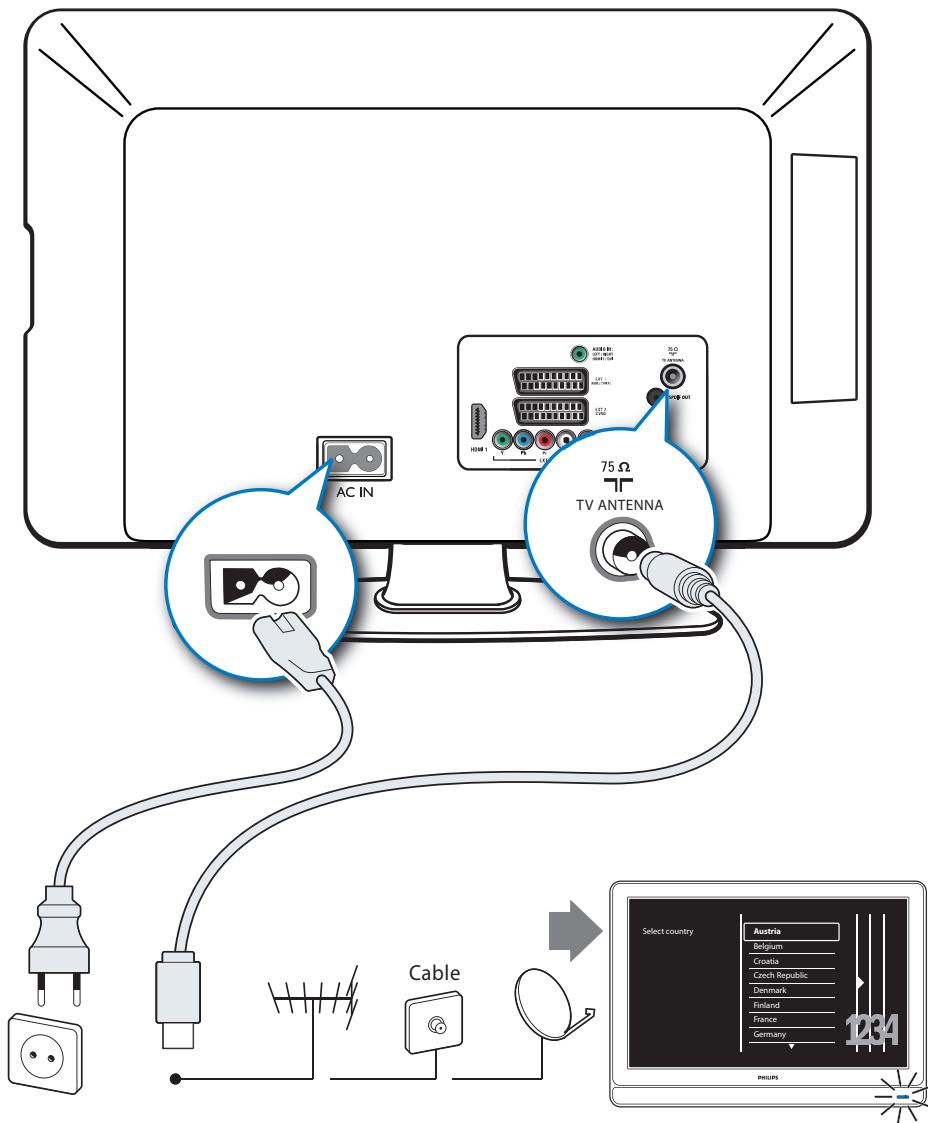

3

1

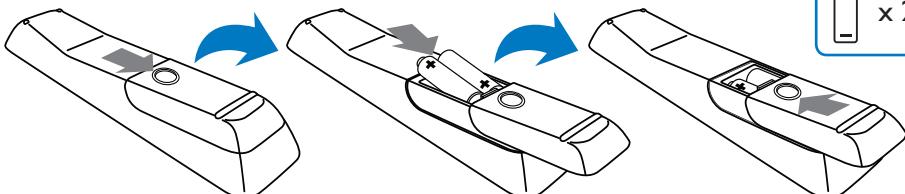


2

Select country

Austria
Belgium
Croatia
Czech Republic
Denmark
Finland
France
Germany


1234

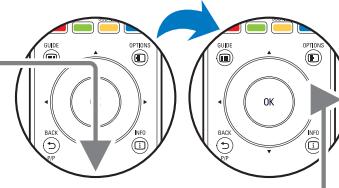

Select language

English
Česky
Български
Dansk
Deutsch
Ελληνικά
Español
Français


1234

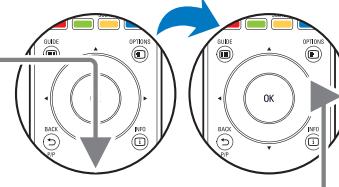

Select TV location

Home
Shop


1234

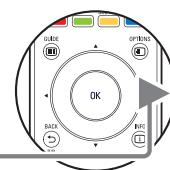





Start automatic installation. This takes a few minutes.


123 Start?


4

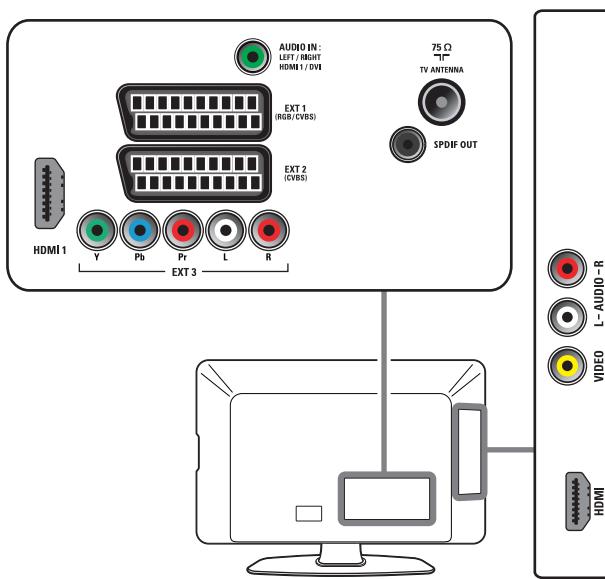

HDMI	Four blue star icons. To the right is a grey HDMI plug icon.
YPbPr & AUDIO L/R	Five colored component video and audio cables: green/Y, blue/Pb, red/Pr, white/L, and red/R.
SCART	A grey SCART plug icon.
AUDIO L/R & VIDEO IN	Three colored audio and video cables: yellow/VIDEO, white/L, and red/R.

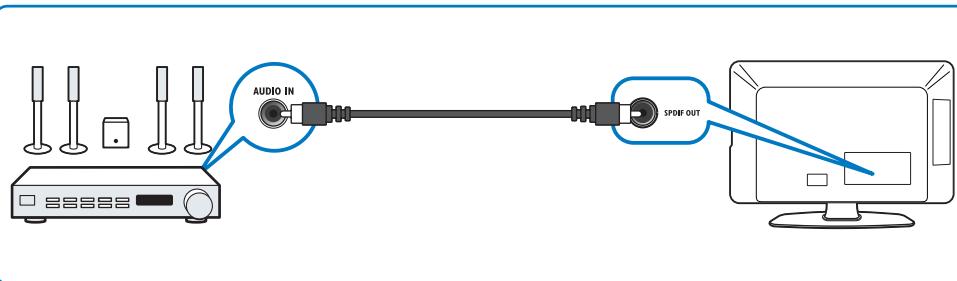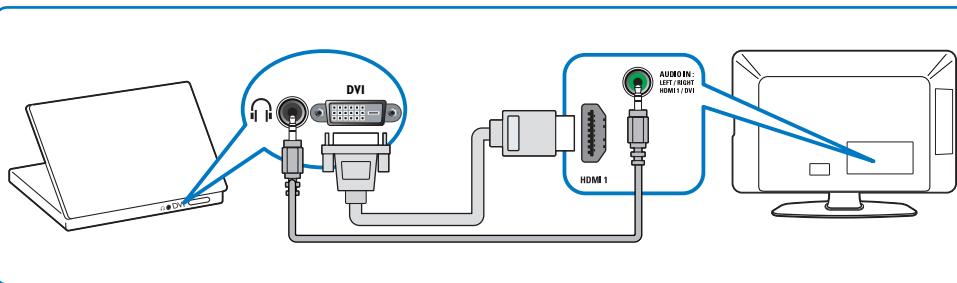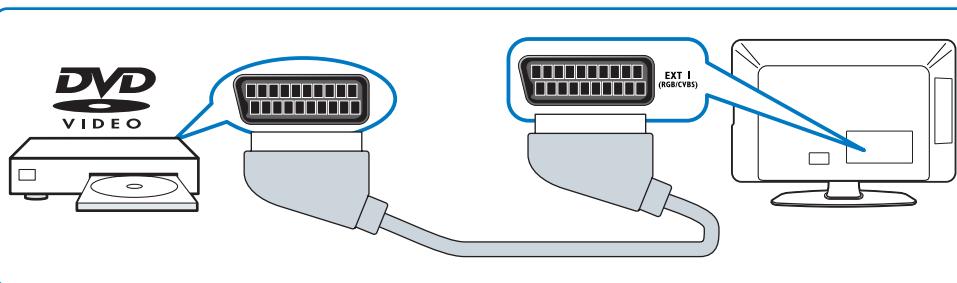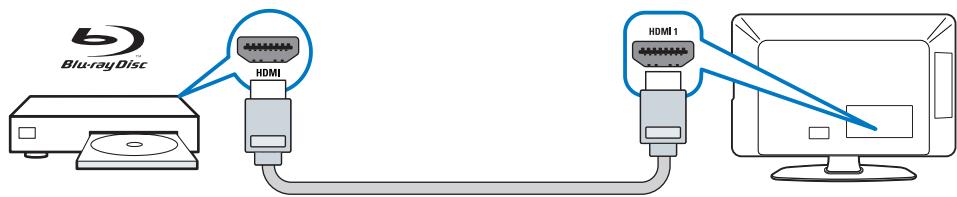

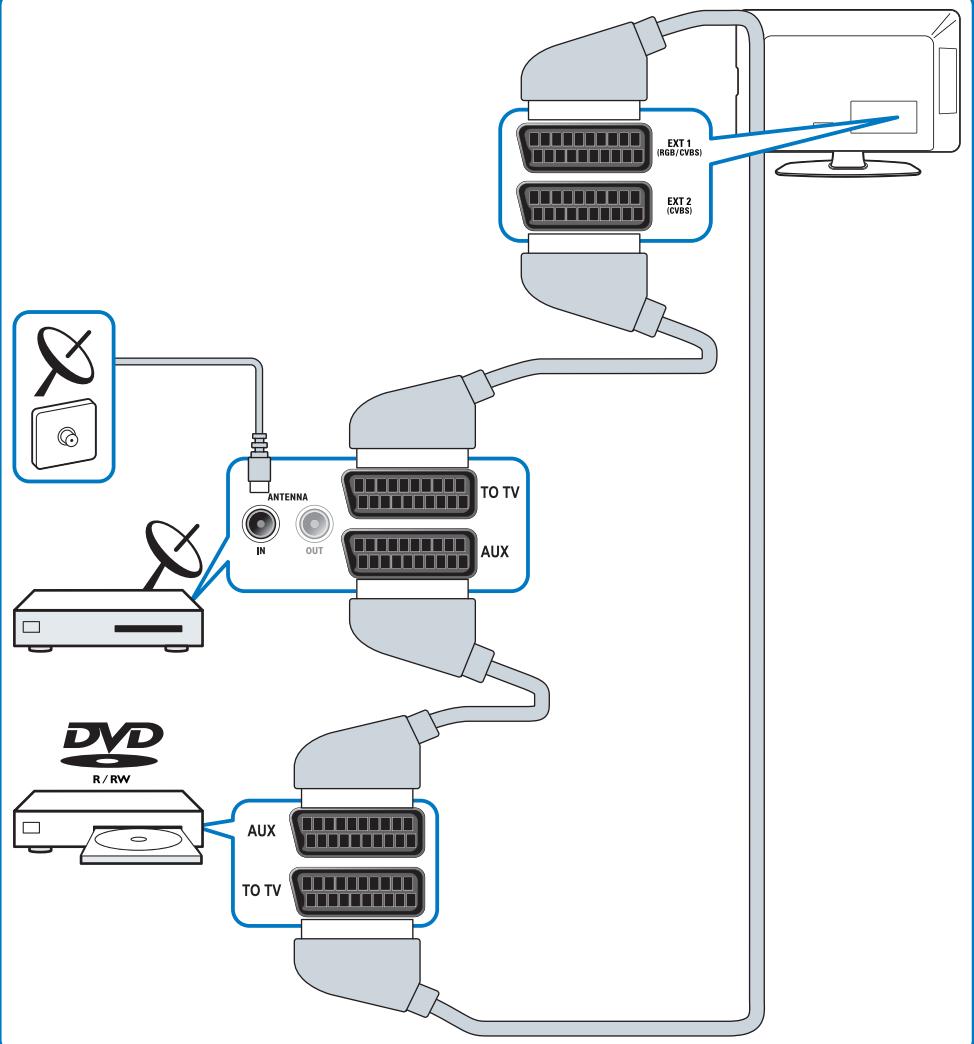

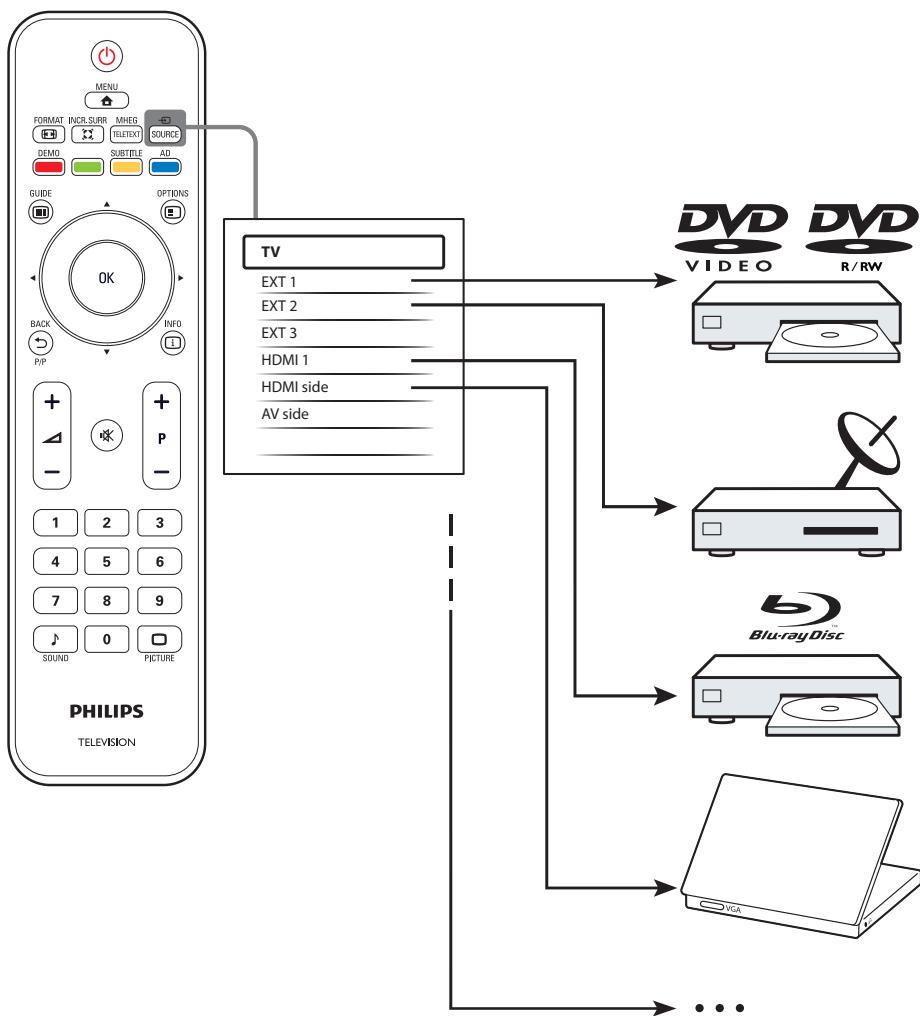



www.philips.com/support



Specifications are subject to change without notice
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2009 © Koninklijke Philips Electronics N.V. All rights reserved.

